

INSTRUCTIONS - CRICUT MAKER 3

- Plug the USB power cord into the Cricut, and the plug into a power outlet.

- Connect the Cricut to your laptop by plugging the USB connecting cable into a USB port, and connecting the opposite end to the Cricut.

- Prepare and load your material.

- On your laptop, open Cricut Design Space. When you are ready to cut your design, click "Make It" in the Design Space software.


- Select material size and mirror (if needed for iron-on vinyl designs). Click next. The software should recognize the Cricut automatically. If it does not, check all connections. Select your material in the software.

- When prompted, press the Go button on the machine to begin cutting. The Cricut will stop when the cut is finished, and the Load/Unload button will blink.

- Press it to unload your material.

- Carefully peel your material off the mat.

- Weed your design. You may need to use tools for intricate designs.

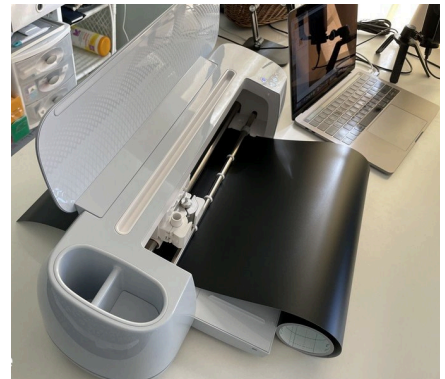

SAFETY

Always ask a staff member if you have questions about using the machine. Ensure that your material is firmly pressed onto the mat and will not move. Never attempt to adjust the material during the cut; always pause the machine if needed. Keep fingers and hands away from the blade at all times, and away from the inside of the machine during cuts. Do not attempt to change the blade or adjust the machine.